


Easy Lift Equipment Co., Inc.

2 Mill Park Court, Newark, Delaware 19713 - Phone: 800-233-1800 / 302-737-7000

EAGLE-TALON GRIP OPERATING INSTRUCTIONS

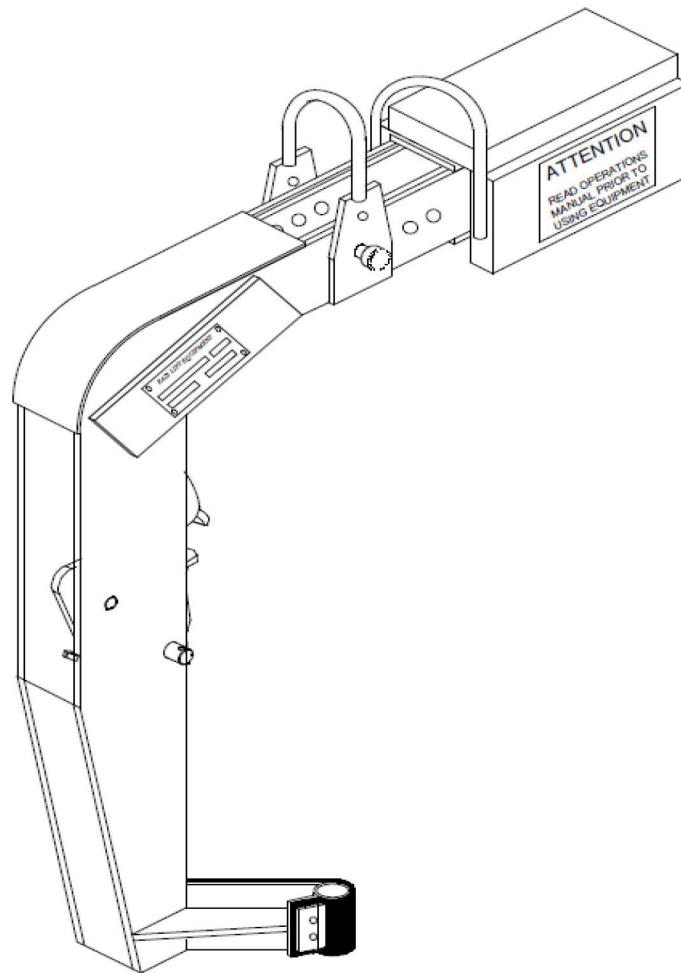

EASY LIFT EQUIPMENT EAGLE-TALON GRIP (ETG) SERIES ATTACHMENTS

INTRODUCTION

The Eagle-Talon Grip series of lift attachments utilize a heavy-duty single automatic clamping mechanism for handling steel and plastic chimed drums. The specification plate affixed to each attachment provides the following information: model number, serial number, attachment weight, and lifting capacity.

This manual contains information to instruct you on the proper use and maintenance of your Easy Lift Equipment unit. This manual should be available to all personnel working with the attachment. Follow the maintenance procedures carefully to ensure a safe and reliable service life. Do not operate your equipment until you have read and understood these instructions.

COMISSIONING YOUR ETG SERIES ATTACHMENT

1. Remove all packing materials and protective strapping.
2. Perform a visual inspection of the entire unit for damage.
3. Secure the chain from a hoist to the shackle on the top of the attachment.

DAILY SAFETY INSPECTION

Do not operate your ETG series attachment if you notice any unsafe condition(s) that may have been caused by an accident or malfunction. Immediately report this condition to your supervisor.

1. Perform a visual inspection, checking for loose or damaged springs.
2. Ensure hoist chain is securely attached to the shackle.
3. Ensure the operator has read the manual and is properly trained to use the attachment.
4. Observe the condition of the equipment for any other malfunction or defect.

If any of these tests are failed, tag the unit properly to keep it out of service until the problem has been resolved.

SAFETY PRACTICES

1. Do not lift loads that exceed the rated capacity of the unit.
2. During transportation, the drum should only be lifted to a height that is necessary for proper floor clearance.
3. Keep hands and feet clear of the clamping head and the area underneath an elevated drum.
4. Be certain the clamping head has made a secure connection with the chime of the drum before attempting to move or transport a load.

WARNINGS

WARNING: Do not lift or suspend loads over people. Stay clear of suspended loads.

WARNING: Do not attempt to overload the attachment, or raise the drum beyond its maximum lifting height.

WARNING: Never transport the attachment at its maximum lifting height.

WARNING: Keep hands and feet away from the pinch points, clamp, and spring.

WARNING: Do not leave unit outside in rain, snow, etc., for extended periods.

WARNING: Never leave the unit unattended with a suspended load.

WARNING: Never wash the unit down. The unit is designed to be wiped down by hand.

WARNING: Do not make alterations or modifications to the unit without Easy Lift Equipment authorization.

EAGLE-TALON GRIP SERIES ATTACHEMENTS OPERATING INSTRUCTIONS

TO ADJUST FOR DRUM DIAMETER:

1. The attachment is set up from the factory to handle a 55-gallon drum with a 23-inch diameter. The shackle and pin can be adjusted as needed to handle a variety of drum diameters and weights.
2. Slide counter weight and shackle to desired hole positions and insert pin to lock in place.

TO ENGAGE AND TRANSPORT DRUMS:

1. Lower the attachment so the clamping head is positioned below the chime of the drum.
2. Push attachment toward the drum, using the handle provided.
3. Raise the hoist to engage the clamping head with the chime of the drum.

TO RELEASE DRUM(S):

1. Lower hoist to set drum back on level surface. The clamping head will disengage automatically.

Eagle-Talon Grip Series Attachment Maintenance Checklist

			Maintenance Intervals			
			1 Mo	6 Mo	12 Mo	3 Yrs
Structural Steel:	1.1	Check for cracked welds on frame		X		
	1.4	Check to verify that specification data plates are affixed to the attachment			X	
Clamping Head:	2.1	Inspect head for loose or missing pins, cotter pins, springs, pins, and replace as necessary	X			
	2.2	Lubricate clamping mechanisms	X			
Belts:	3.1	Check belt for wear			X	
Pins, Springs, Inner housings, Links:	4.1	Replace all springs			X	
	4.2	Replace all pins and links				X

**The maintenance intervals refer to normal service conditions. In case of aggravated conditions, the intervals must be reduced/increased as required.

Easy Lift Equipment Co., Inc.

2 Mill Park Court, Newark, Delaware 19713 - Phone: 800-233-1800 / 302-737-7000

EASY LIFT EQUIPMENT WARRANTY POLICY FOR MODELS WITH PREFIXES: ED/ER/EL/ELDR/EG & RCR

Easy Lift Equipment (“ELE”) warrants each new product to be free from factory material and workmanship defects, under normal use with proper maintenance, for a period of 12 months. Warranty coverage for this warranty period is provided by authorized dealers and includes parts. Labor is covered for the same periods of 12 months as outlined above. Please call ELE for the authorized repair dealer in your area.

ELE shall be the sole judge of the validity of any claim or defect and may elect to make any replacement or repair of any part thereof that it has agreed to be defective. Wearable Items such as: hoses, bearings, belts, brushes, seals, lift motors, clamp motors, relays, fuses, springs and wheels are wear items not covered under the warranty policy. ELE assumes no responsibility whatsoever to work done, parts replaced, or expenses incurred not specifically authorized by ELE. Normal maintenance or replacement of service items is not covered by this warranty. No warranty claims will be considered for customers with any delinquent outstanding balance. When batteries, battery chargers, scale printers or scale indicators are purchased from ELE with the equipment, the original manufacturer’s warranty applies.

WARRANTY LIMITATION/DISCLAIMERS:

Easy Lift Equipment reserves the right to void warranty coverage if the unit has been overloaded beyond rated capacity; damaged due to: abuse, misuse, neglect, accidents, freight damage, improper usage, improper repair, and/or improper storage; or any modification or repair conducted in a manner not approved by Easy Lift Equipment. Equipment used in freezers, abrasive, corrosive, and/or excessively moist conditions must be properly equipped for the environment to ensure the warranty is not voided. Warranty questions and claims should be directed to our customer service department. ELE customer service representatives will help you assess and resolve the claim or assist you in contacting the local authorized dealer or representative. The warranty described here shall constitute the sole remedy of the authorized dealer and/or the initial purchaser. ELE neither assumes nor authorizes any person to assume for it any other obligation or responsibility in connection with this product warranty. In no event shall ELE be responsible for direct, indirect, special or consequential damages or any other delay or any economic or commercial loss resulting from Easy Lift Equipment’s performance or non-performance under this warranty. This warranty is expressly in lieu of all warranties, obligations or responsibilities of ELE dealers or other authorized source, expressed, implied or statutory.

SUBMITTING CLAIMS:

To make a claim under this policy, please contact Easy Lift Equipment for assistance. We can be reached by calling 800-233-1800 ext. 4 for customer service or by writing to sales@easylifteqpt.com. Do not return defective parts unless a return authorization (RA) has been provided requesting the return. If requested, we will provide shipping information on how the part should be returned and bear the expense for the return shipping, if the part is proven to be defective. A copy of the work order made at the time of the repair and parts claimed under warranty may be requested for ELE’s inspection.

ORDERING PARTS:

Easy Lift Equipment’s parts are distributed through our customer service department and ship the same day as ordered whenever possible. You will be well taken care of whenever parts, adjustments or repairs are needed.

When contacting ELE, please be sure to state the model and serial number for the equipment. There is no cost for electronic copies of replacement manuals, parts lists and other general information containing part numbers and nomenclature. Most manuals contain parts pricing, but it is not guaranteed to be valid as parts pricing can change at any time without notice. Any customer service representative can provide timely parts quotations upon request. Adherence to above procedure will save time and provide prompt assistance when it counts. You are of course always welcome to bring to us any questions, comments or recommendations pertaining to your Easy Lift Equipment products.


MANUFACTURER CONTACT INFORMATION:

Easy Lift Equipment Co., Inc.
2 Mill Park Ct.
Newark, DE 19713
Email: sales@easylifteqpt.com

Phone: 800-233-1800: 302-737-7000
Fax: 302-737-7333
Website: www.easylifteqpt.com

THIS PAGE INTENTIONALLY LEFT BLANK

EAGLE-TALON GRIP ASSEMBLY

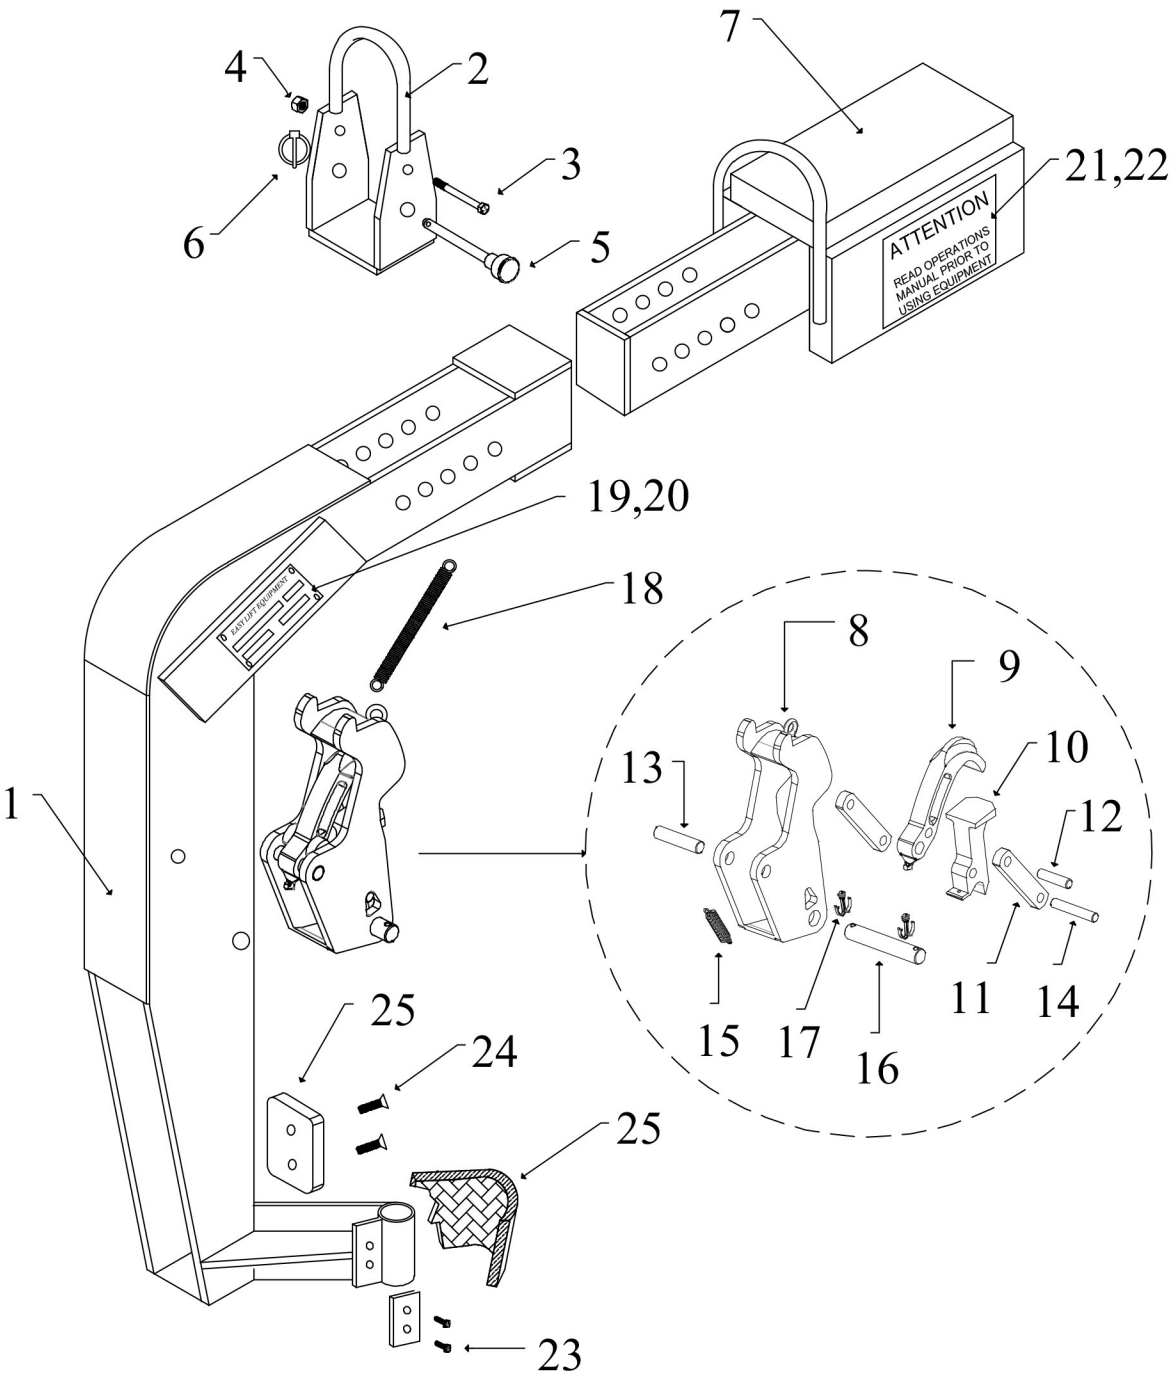

EAGLE-TALON GRIP PARTS LIST

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	1SE-BH	ETG-1 Frame	1
2	1512	Adjustment Shackle	1
3	3/8-16 x 4 HHCS-SS	3/8-16 x 4 Hex Head Cap Screw (stainless steel)	1
4	3/8-16 NLN-SS	3/8-16 Nylon Locking Nut (stainless steel)	1
5	10204-1SS	1/2" x 4-1/2" Adjusting Pin (stainless steel)	1
6	HANG-2	3/16 x 1-3/4 Circle Cotter "Hang 2" (7016)	1
7	2512	Counter Weight Head	1
8	7902	Inner Housing (Black Powder Coating)	1
8	7902SS	Inner Housing (Stainless Steel - Non-Sparking)	1
9	1007SS	Stainless Steel Upper Clamp Jaw (Non-Sparking)	1
10	5107SS	Stainless Steel Lower Clamp Jaw (Non-Sparking)	1
11	70091	Link, Jaw to Jaw	2
12	72041	3/8" x 1-1/2" Pin, Link to Upper Jaw (zinc)	1
13	10061	1/2" x 2.182" Pin, Upper Jaw to Housing (zinc)	1
14	62041	3/8" x 2.13" Pin, Link to Lower Jaw (zinc)	1
15	4306	Jaw Spring (zinc)	1
16	18006-1	Pin, Housing to Housing (zinc) (HP10-305-E)	1
17	6006-CP	Cotter Pin, 5/32" x 1" (zinc)	2
18	2206	Housing to Housing Spring (zinc)	1
19	MCL007031	Specification Plate	1
20	6 x 1/4 RU DS-SS	6 x 1/4 Round Head U Drive Screw (stainless steel)	4
21	ADART002	Attention Read Operations Manual Decal	1
22	ADART015	ELE Address Decal (Horizontal)	1
23	1/4-20 x 1 HHCS	1/4-20 x 1 Hex Head Cap Screw Grade 5 (zinc)	4
23	1/4-20 x 1 HHCS-SS	1/4-20 x 1 Hex Head Cap Screw (stainless steel)	4
24	1/4-20 x 1 FSHCS-SS	1/4-20 x 1 Flat Socket Head Cap Screw (stainless steel)	2
25	5517	ETG1 Rubber Belt & UHMW Belt Strap	1